




# INSTALL **CABISEAL** IN 3 EASY STEPS

1. USE TEMPLATE PROVIDED FOR HOLE POSITIONING IN CABINET

2. AFTER DISHWASHER IS PLUMBED, IN POSITION AND OPERATIONAL, PLACE **CABISEAL** AROUND THE HOSES AND ELECTRICAL LEAD

3. SCREW **CABISEAL** INTO PLACE WITH SUPPLIED SCREWS AND CAULK FOR A NON-PERMANENT SEAL. TAKE CARE TO AVOID DAMAGE TO DISHWASHER LEADS OR HOSES WHEN SECURING **CABISEAL**.

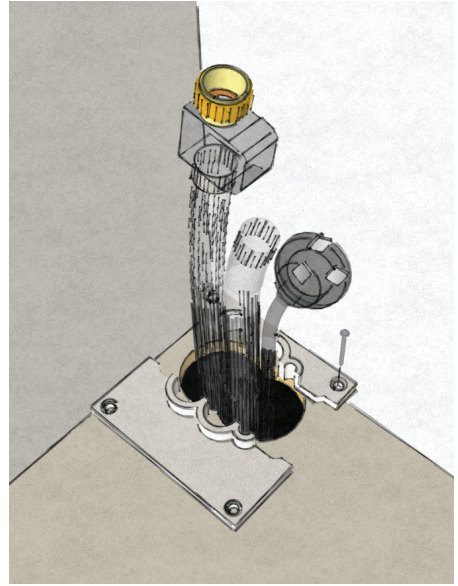


NOTE: SUPPLIED SCREWS ARE FOR STANDARD 16MM SUBSTRATES. PLEASE INQUIRE WITH VENDOR AS TO THE SUITABILITY WHEN RETROFITTING. THIS PRODUCT HAS BEEN DESIGNED AND IS SUPPLIED BY HARP FURNITURE T/A HARP INDUSTRIES AND IS PATENT PROTECTED.

## DRILLING TEMPLATE

L/H INSTALLATION

R/H INSTALLATION

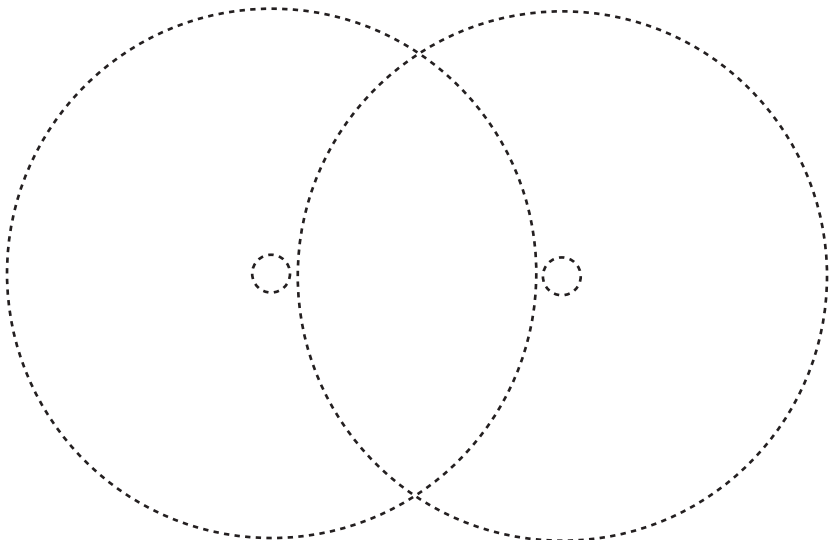

BACK OF CABINET