

56mm
DIAMETER

CUT OUT
(DUSTPAN HOSE)

↑ KITVAC BACK

KITVAC BACK ↑


KITVAC[®] TEMPLATE

1. Check unit location before cutting.
2. Unit/template sits on bottom shelf at front of cabinet (Approx 15mm from back of hinge).
OR
(Approx 80mm from back of cupboard door).
3. Place template against your wall mount and drill pilot hole at rear.
NOTE: For left hand side mount you have extra hole cut out at front.

PLACE AGAINST CUPBOARD WALL FOR
LEFT HAND SIDE MOUNT UNIT

PLACE AGAINST CUPBOARD WALL FOR
RIGHT HAND SIDE MOUNT UNIT

USE ONLY FOR LEFT HAND SIDE MOUNT

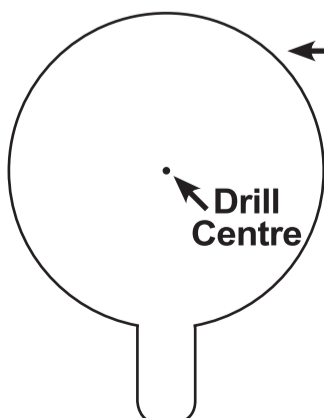

42mm
DIAMETER
CUT OUT
& 13mm x 8mm GROOVE
(PLUG & LEAD)

↓ KITVAC FRONT

KITVAC FRONT ↓