

# Fitting Instructions


## LIN-X1000 Flush Hinge to suit Heavy Doors Installation Details



Table 1: Handle position area (for door thickness 40mm)

Door width	Hinge side clearance		
	10mm	15mm	20mm
750mm- 900mm	Max. 300mm	Max. 350mm	Max. 500mm
900mm-1000mm	Max. 200mm	Max. 250mm	Max. 400mm
1000mm-1100mm	Max. 100mm	Max. 150mm	Max. 300mm

Handle should be installed within the area shown in Table 1.

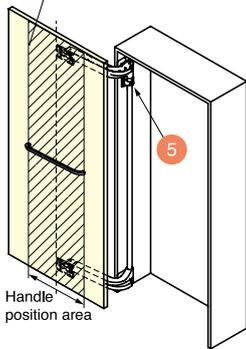


[Details of 5]




\*Handle position area is centred on the door width. Handle can also be used vertically.

[Locus Chart]

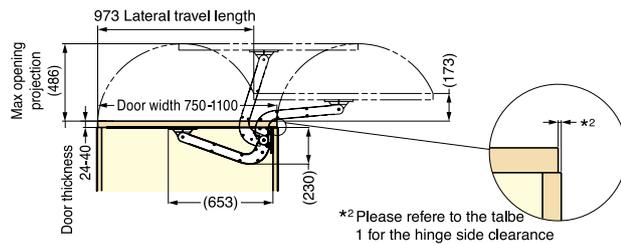

[Installation Example]

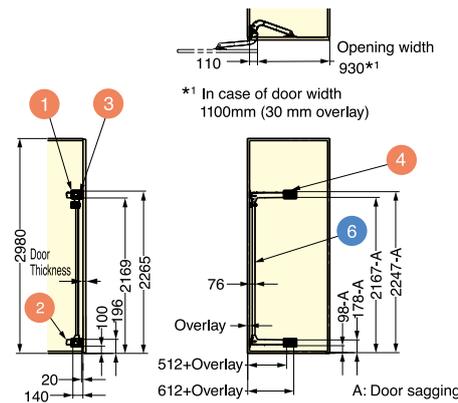

\*1 In case of door width 1100mm (30 mm overlay)


Please set door sagging A based on the following table so that the door will not contact the floor.

Door weight	A: Door sagging
20kg	2mm
30kg	3.5mm
40kg	5mm
50kg	6.5mm
60kg	8mm
70kg	9.5mm
80kg	11mm
90kg	12.5mm

• For carpeted floor, add the carpet thickness to the "door sagging" shown above.  
• This product is vertically adjustable by  $\pm 7$ mm after installation. For adjustment method, please refer to the installation instruction.



### Max. door width 1100mm (effective opening width 930 mm)

Installed to side wall, not interfering with taking in/out of articles.

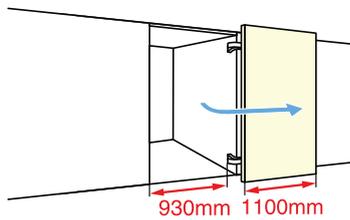


### Door does not get in the way when opening and closing.

Opening projection is about half of swing door. Door will be flush with surrounding walls when closed.

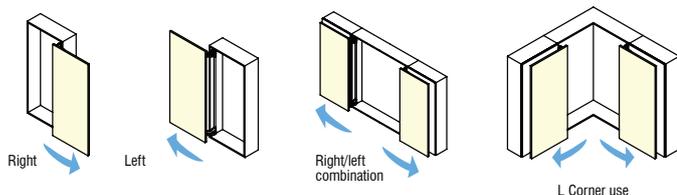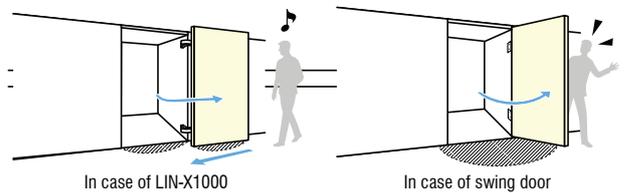

• Suitable for various cabinets.

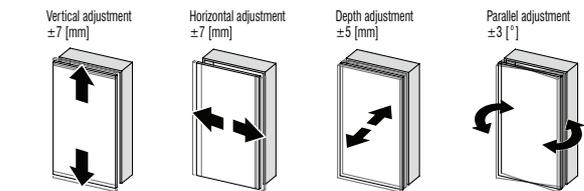

• Adjustable in vertical, horizontal, depth and parallel directions.